


# Linka Plan

English Instructions #172-RB-1 p-1

Lineside Railway buildings

## LINESIDE RAILWAY BUILDINGS

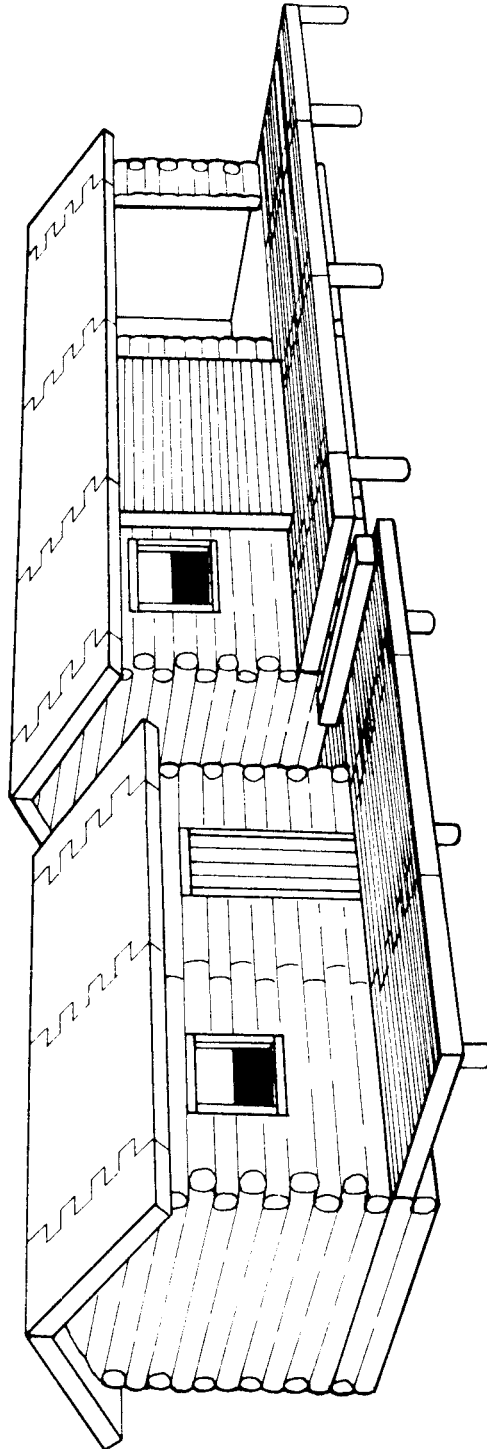

# Linka Plan

English Instructions #172-RB-1 p-2


## Lineside Railway buildings

Lineside Railway

Castings number	70	72	76	77	85	86	88	89	91	96	98
Qty Required	26	4	1	2	2	1	1	10	7	4	4
2006	T3	T3	T3	T3	T2	T2	T2	R2	T1	R2	R2

### Where the parts go

ITEMS MARKED THUS \* ARE TO BE CUT OR SHAPED

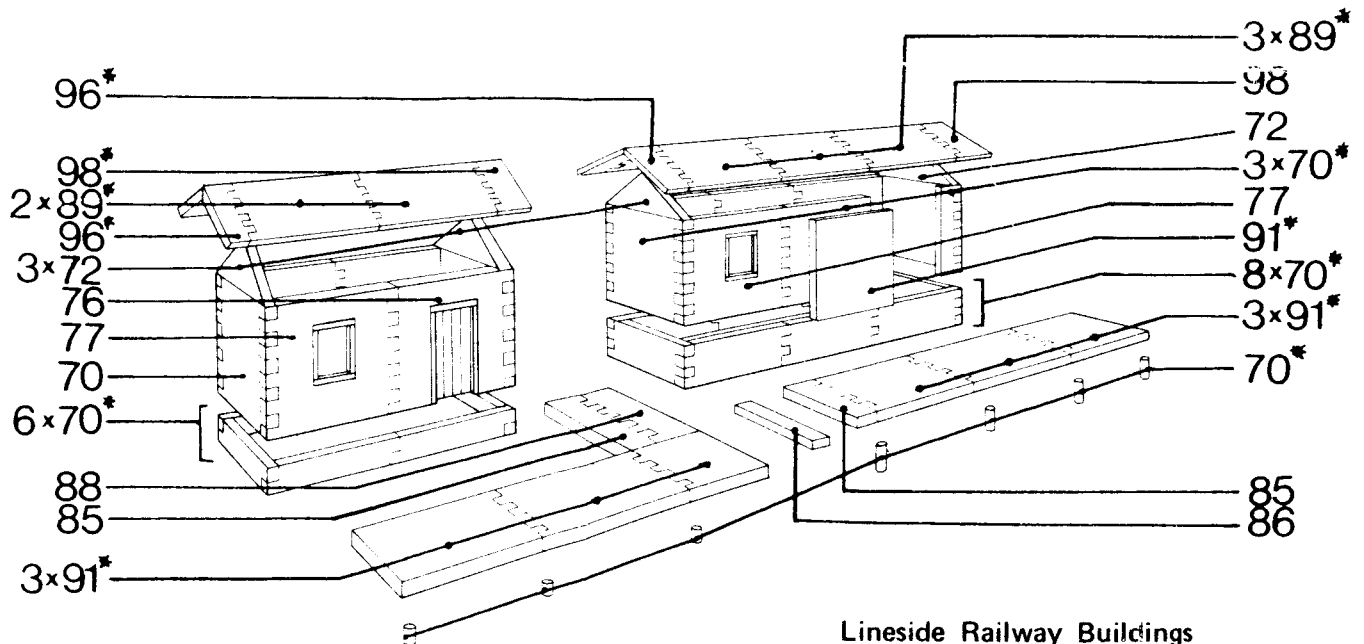

Lineside Railway Buildings

### Lineside Railway Buildings

These are representative of small stations dotted along the early western railways. As you will see the passenger accommodation has a slightly raised platform in front and the adjoining goods shed has a higher loading platform.

1. Make up both bases using parts cut from No. 70 castings.
2. Make up the buildings as shown. Note that the door of the Goods Shed is made from lapboard. It can be glued open or shut.
3. Make up roof panels. Chamfer top edges so that they meet flush and also chamfer all other edges so that they appear thinner.
4. Glue platforms in place level with the top of the bases. Cut the supports to the appropriate height.
5. Paint to represent well weathered logs and glue window acetate in place.